



Biwin Intelligence User Guide

CONTENTS

1	Introduction	03
2	Installation Guide	04
3	Basic Features	05
4	Notes	14
5	FAQs	16

1.Introduction

Welcome to Biwin Intelligence! This multifunctional SSD management software provides comprehensive support for Biwin-brand internal SSDs, portable SSDs (PSSDs), Mini SSDs, and CFexpress cards, while maintaining compatibility with major third-party brands to meet diverse user needs. The software helps users manage their drives with features like Performance Test, Data Migration, Drive Cloning, and more. This guide provides detailed installation and usage instructions to help you fully leverage the powerful features of this software.

1.1 Supported Models

Biwin

- SSD: Black Opal NV3500 / Biwin NV7200 / Black Opal NV7400 / Black Opal NV7400 Heatsink / Black Opal X570 / Black Opal X570 PRO / Black Opal X570H PRO / Biwin M350 / Biwin M100 / Biwin M560
- PSSD: Amber PM2000 / Amber PR2000 / Biwin PD2000 / Biwin PD450
- UFD: Biwin UD400 / Amber UV200
- CFE: Amber CA350 / Amber CA400 / Amber CB450 / Amber CB500
- Mini SSD: Biwin CL100
- SD: Biwin SD160 / Biwin SD210
- MicroSD: Biwin MS160 / Biwin MS210
- MicroSD Express: Amber ME300

Acer

- SSD: SA100 / RE100 2.5 / RE100 M.2 / FA100 / FA200 / FA300 / MA200 / N3500 / N5000M / N5000S / N5000 / N7000 / N8000

HP

- SSD: S650 / S700 / S750 / EX900 / EX900Plus / EX920 / EX950 / FX700 / FX900 / FX900Plus / FX900Pro / GX900
- PSSD: P500 / P900

Lenovo

- SSD: LN960 / LN950 / LN860 / LS800
- PSSD: LP100

Predator

- SSD: GM3500 / GM6 / GM7 / GM7000 / GM7000 HEATSINK / GM9000 / GM9 / GM9000HS
- PSSD: GP30

1.2 Connection type

PCIe, SATA, SSD Enclosure, Memory Card Reader

Supported SSD Enclosures: JMS583 / ASM2362 / ASM2364 / ASM2464PD / RTL9210B

2. Installation Guide

2.1 System Requirements

- Operating System: Windows 10/11
- Minimum RAM: 4 GB
- Storage Space: At least 500 MB of free space available

2.2 Download Link

Visit the Biwin Consumer-Grade Website: <https://www.biwintech.com/biwin-intelligence/>

3. Basic Features

3.1 Feature Modules

Description: Drive Information, S.M.A.R.T., Error Scan, Performance Test, Performance Optimization, Drive Erase, Data Migration, Drive Cloning, Firmware Update, System Information, Settings.

3.2 Drive Information

 
Description: Provides detailed data to help you quickly understand your drive's status.

Information displayed includes:

- Basic Information: Serial Number, Firmware, Manufacturer, Interface, Interface Speed;
- Drive History: Total Host Reads, Total Host Writes, Total NAND Writes, Power Cycles, Power-On Hours;
- Drive Status: Health, Temperature;
- Drive Partition: Total Capacity, Used Capacity, Unallocated Capacity.

Steps:

- Open the software, and the Drive Information page will appear by default;
- Select the drive to view (if multiple drives are connected);
- Check the detailed information and status of the drive on the right side.

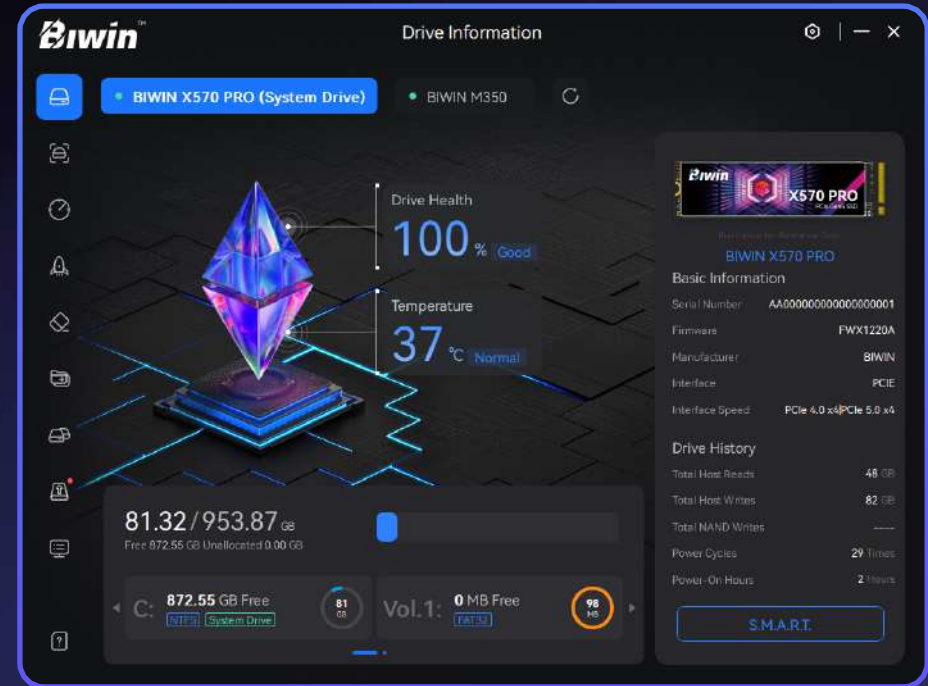

3.3 S.M.A.R.T.

Description: S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) monitors and analyzes your drive to detect possible failure early.

Steps:

- Click the “Drive Information” icon and then the “S.M.A.R.T.” button in the bottom-right corner of the Drive Information page;
- View the S.M.A.R.T. parameters and their current values;
- Check the health status using the status indicator (green = good, yellow = normal, red = warning);
- Click the refresh button next to the status indicator to update the S.M.A.R.T. information.

The image displays two screenshots of the Biwin Drive Information interface, showing S.M.A.R.T. data for two different drives.

Top Screenshot: BIWIN X570H PRO 1TB (System Drive)

The interface shows the drive selected, and the S.M.A.R.T. status is Good (green). The table displays the following data:

Status	ID	Description	Current Value
Good	01	Critical Warning	000000000000
Good	02	Composite Temperature	00000000013E
Good	03	Available Spare Space	000000000064
Good	04	Available Spare Threshold	00000000000A
Good	05	Percentage Used	000000000000
Good	06	Data Units Read	000000000571D
Good	07	Data Units Written	000000000EE6A
Good	08	Host Read Commands	000000003A318
Good	09	Host Write Commands	000000004A2C0
Good	0A	Controller Busy Time	000000000000
Good	0B	Power Cycles	000000000000
Good	0C	Power On Hours	000000000000

Bottom Screenshot: BIWIN M100 1TB

The interface shows the drive selected, and the S.M.A.R.T. status is Good (green). The table displays the following data:

Status	ID	Description	Current Value	Worst Value	Threshold	Raw Value
Good	05	Reallocated Sector Count	100	100	50	000000000000
Good	09	Power-On Hours	100	100	0	000000000011
Good	0C	Power Cycle Count	100	100	0	000000000015
Good	A7	SSD Protect Mode	100	100	0	000000000000
Good	A8	PHY Error Count	100	100	0	000000000000
Good	A9	Bad Block Count	100	100	10	00001A00002
Good	AB	Program Fail Count	0	0	0	000000000000
Good	AC	Erase Fail Count	0	0	0	000000000000
Good	AD	Erase Count	200	200	0	00010000001
Good	AF	Bad Cluster Table Count	100	100	10	000000000000
Good	B1	Read Retry Count	100	100	0	000000000000
Good	B4	Spare Block Count Left	100	100	0	00000000AC0

3.4 Error Scan

Description: Provides Quick Scan and Deep Scan modes to detect potential drive faults.

Steps:

 
- Click the “Error Scan” icon;
- Select Scan Mode: Quick Scan or Deep Scan;
- Click the "Start" button;
- After the update, follow the shutdown prompt to complete the firmware update. The firmware will be updated to the latest version after restarting.

3.5 Performance Test

Description: Provides the drive's read and write performance and detailed data.

Steps:

- Click the “Performance Test” icon;
- Set the “Setup Benchmark” with the performance indicators;
- Click the "Start" button. After the test is complete, you can view the results. If needed, you can click the "Retry" button to run it again.

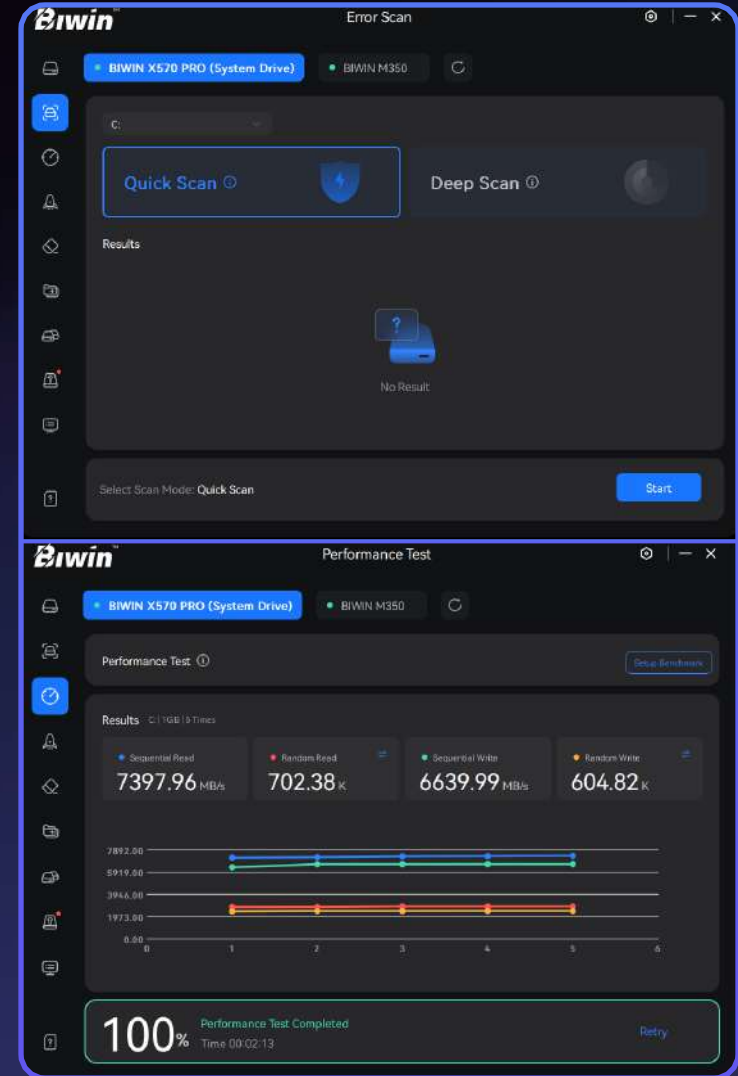

3.6 Performance Optimization (For Biwin Products Only)

 
Description: Enhances drive performance by adjusting operational parameters to extend its lifespan. The TRIM (Trimmed Rows Improve Memory) and SECURITY features are enabled or disabled based on the drive's firmware support, and users cannot adjust them;

OS settings optimize the drive's performance through the operating system.

OS Settings Steps:

- Click the “Performance Optimization” icon;
- Click the “OS Settings” button, and select the corresponding optimization scheme based on the user's OS needs;
- Click the toggle button to enable the optimization option.

- Mini SSDs are currently not supported.

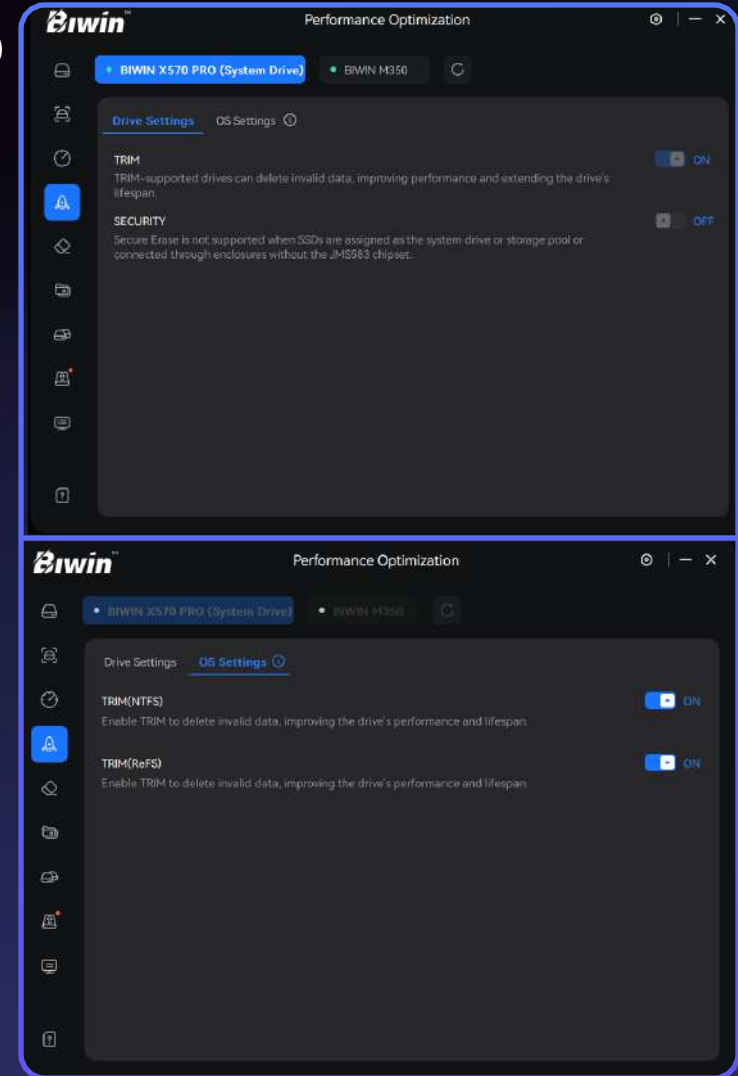

3.7 Drive Erase

Description: Erases the file system index and directory structure or resets the drive to its factory settings.

 
Steps:

- Click the “Drive Erase” icon;
- Select the drive to erase and choose the erasure method;
- Click the "Start" button and confirm the risk;
- After completion, view the results and click the "Retry" button to run it again.

Notes:

- Standard Erase: Erases the drive’s file system index and directory structure, losing the original data and partition information, and the drive will be uninitialized;
- Secure Erase (For Biwin Products Only): Resets the drive to factory settings, enhancing read/write speeds. Secure Erase will delete all data, which cannot be recovered, so back up important data before proceeding.

- Mini SSDs, SD and microSD cards are currently not supported.

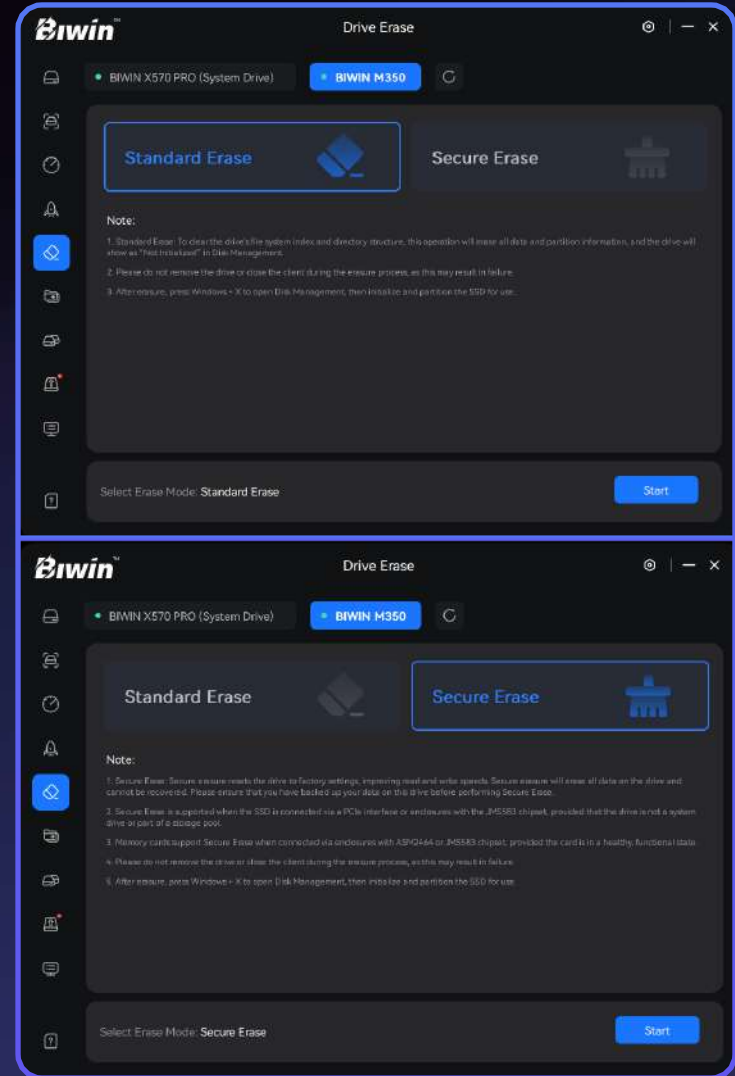

3.8 Data Migration

Description: Transfers data from the source drive to the target drive.

Steps:

 
- Click the “Data Migration” icon;
- Select the source and target drives;
- Choose the files to migrate and the target directory;
- Click the "Start" button. After the migration is complete, you can view the results. If needed, you can click the "Retry" button to run it again.

3.9 Drive Cloning

Description: Duplicates data from the source drive to the target drive. This feature is recommended for system cloning.

Steps:

- Click the “Drive Cloning” icon;
- Select the source and target drives;
- Click the "Start" button;
- After cloning is complete, you can view the results. If needed, you can click the "Retry" button to run it again.

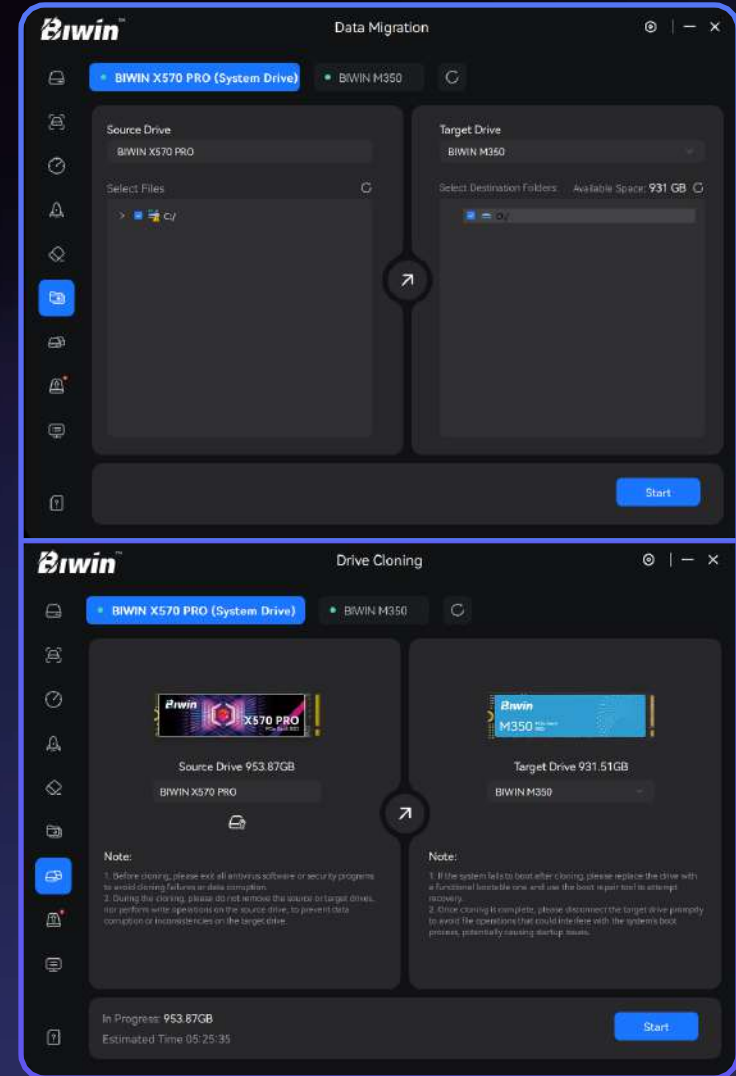

3.10 Firmware Update (For Biwin Products Only)

Description: Improves the drive's performance, resolves issues, or enhances compatibility.

Steps:

 
- Please be sure to back up your data.
- Click the “Firmware Update” icon;
 - Check the drive's current firmware version;
 - Select the drive to update, then click the "Update Now" button;
 - After the update, follow the restart notification to complete the firmware update. The firmware will be updated to the latest version after the restart.
 - Mini SSDs, SD and microSD cards are currently not supported.

3.11 System Information

Description: Provides details about the system configuration.

Steps:

- Click the “System Information” icon;
- The interface will display information about the current host, including operating system information, hardware specifications and storage controller details.

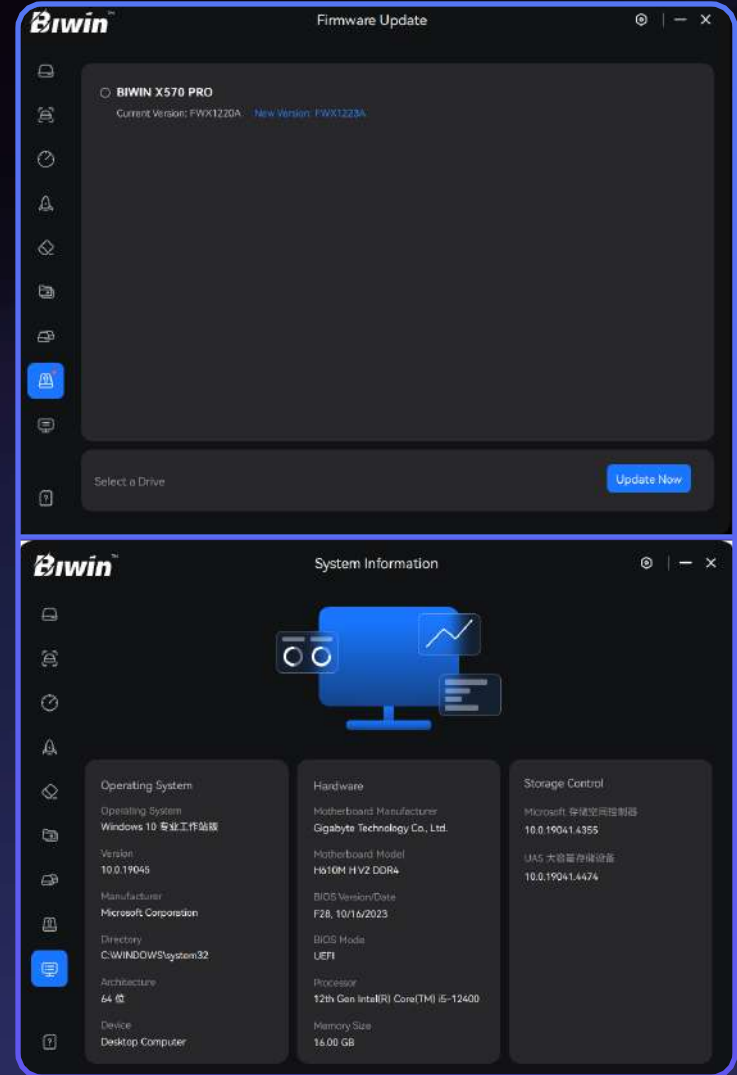

3.12 User Guide

Description: Provides detailed instructions, usage notes, and solutions to common issues for reference.

Steps:

Click the "User Guide" button to view detailed content.

 
3.13 Settings

3.13.1 Auto Scan

Description: Allows users to choose whether to enable the Auto Scan feature.

3.13.2 Language Option

Description: Supports a multilingual interface with Simplified Chinese, Traditional Chinese and English for global users.

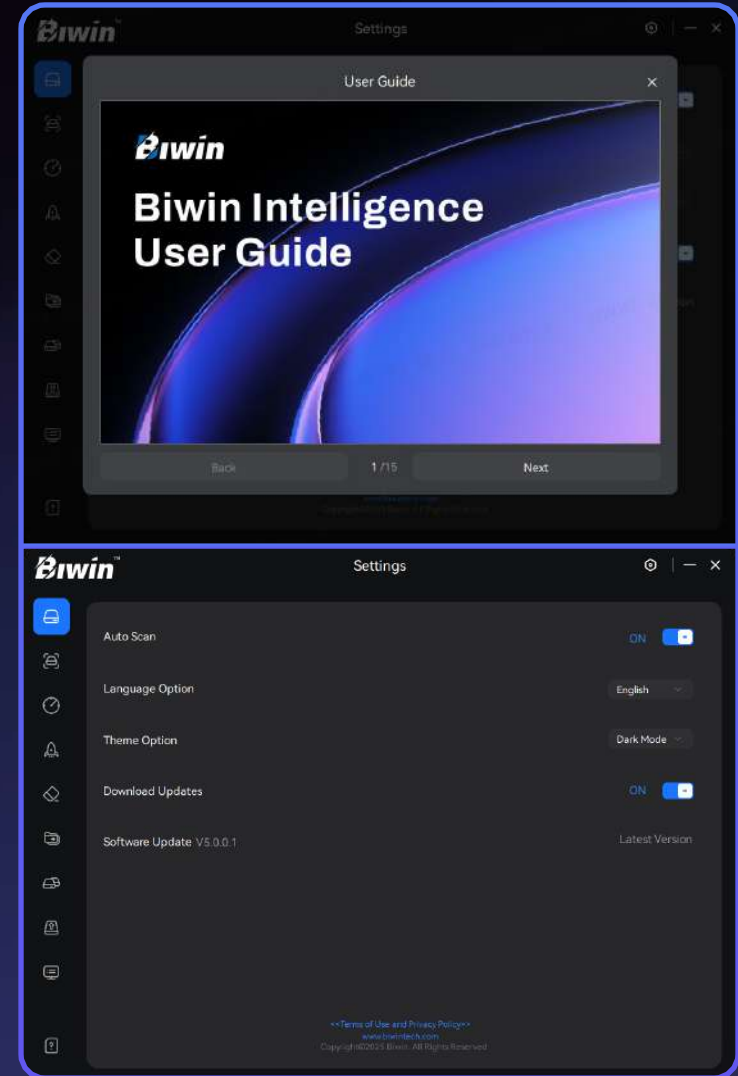

3.13.3 Theme Option

Description: Supports Light/Dark mode, allowing users to switch between themes based on their preference.

3.13.4 Download Updates

Description: Allows users to choose whether to enable the automatic download of software updates.

3.13.5 Software Update

 
Description: Allows users to update the software to access the latest features.

3.13.6 Terms of Use and Privacy Policy

Description: Includes legal disclaimers and policy terms for reference.

3.13.7 BIWIN Consumer-Grade Website

Description: Links to <https://biwintech.com/> for more support and resources.

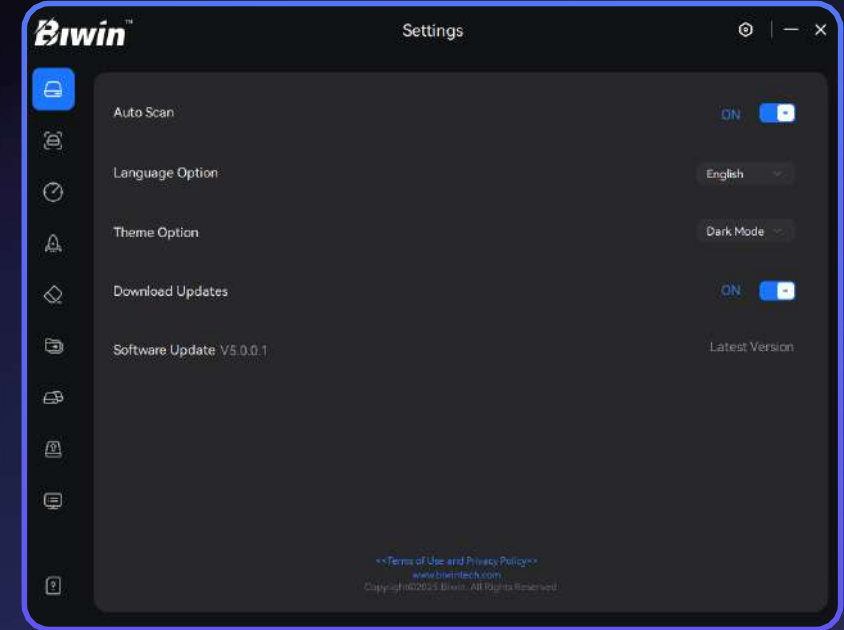

4. Notes

4.1 Drive Detection & Identification

- 4.1.1 If the drive fails to load in Biwin Intelligence, please check its status under "Disk Management" to confirm it is properly mounted.
- 4.1.2 If a partition lacks a drive letter or is identified as a partition of another system type, Biwin Intelligence will classify it as a Vol partition with an available capacity of 0 MB and mark the drive as unsupported.
- 4.1.3 If "No Partition Detected" is displayed, press WIN+X to open the "Disk Management" interface, initialize the SSD and create partitions before proceeding.
- 4.1.4 S.M.A.R.T. values are displayed in hexadecimal format.

4.2 Error Scan & Performance Test

- 4.2.1 The duration of the Deep Scan increases exponentially as the remaining free space grows. Error Scan does not support partition operations, which may result in failure.
- 4.2.2 Deep Scan includes a preparation phase followed by the actual scanning phase.
- 4.2.3 During the normal testing process, the drive must not be abnormally removed or the testing tool forcibly turned off; otherwise, it will cause abnormal functions of the drive.

4.3 Drive Erase

- 4.3.1 Before performing Drive Erase, please ensure that all important data has been backed up.
- 4.3.2 If Secure Erase fails, please update your Windows version and try again.
- 4.3.3 If the SSD fails to erase when connected through an external enclosure, please reconnect the SSD via PCIe to the host and try again.
- 4.3.4 microSD Express and CFexpress memory cards require a Biwin card reader.

4.4 Performance Optimization & Firmware Update

- 4.4.1 Performance Optimization and Firmware Update may take some time. Please wait.
- 4.4.2 microSD Express and CFexpress memory cards require a Biwin card reader.

4.5 Data Migration & Drive Cloning

- 4.5.1 Before performing Drive Cloning, please ensure that all important data has been backed up.
- 4.5.2 Before performing Data Migration or Drive Cloning, please ensure that the target drive has sufficient storage capacity.
- 4.5.3 During Data Migration, a new folder will be created in the selected path of the target drive to store the migrated data.
- 4.5.4 The source drive for Drive Cloning and Data Migration is selected from the drive list, while the target drive is chosen from a dropdown menu.
- 4.5.5 Data Migration may fail if the source drive is the system drive due to read permission issues.
- 4.5.6 Drive Cloning is supported only when the source drive is a Biwin, Acer, or HP drive, or a system drive from other brands; the target drive must be a Biwin, Acer, or HP drive.
- 4.5.7 Partition copy is currently unavailable when the target disk is a SATA drive.

4.6 Settings

- 4.6.1 Biwin Intelligence automatically refreshes detected drive information every five minutes. This feature can be turned off in the Settings menu.
- 4.6.2 Biwin Intelligence will automatically download updates. This feature can be turned off in the Settings menu.
- 4.6.3 During the installation and use of Biwin Intelligence, third-party antivirus software may issue warnings. However, Biwin Intelligence ensures user privacy and security remain uncompromised. Please add the C:\Windows\BIWIN DISK MASTER directory as a trusted directory in Security Manager.

4.7 Hardware Operations & Compatibility

- 4.7.1 When inserting/removing the M.2 drive while the computer is on, you must completely shut down and restart the system for it to work properly.
- 4.7.2 When using Biwin Intelligence, please avoid performing irregular read/write operations on the drive, such as formatting partitions or overwriting the drive.
- 4.7.3 Resilient File System (ReFS) partitions created on higher operating system versions are recognized as RAW partitions on lower OS versions, which may impact the functionality of certain features.

5. FAQs



Q Why is the Drive Information not displayed?

- Ensure the hard drive is correctly connected via PCIe, SATA, or the required enclosure.
- Restart the software and try again.

Q What should I do if yellow or red warnings appear in S.M.A.R.T.?

- Yellow: Back up important data and perform regular checks.
- Red: Immediately back up data and replace the hard drive.

Q Why are the Performance Test results lower than expected?

- Check if the hard drive is under high load.
- Ensure the drive is connected to a high-speed interface (e.g., PCIe, SATA).
- Verify the Performance Test is running with default settings.
- Close other programs running in the background.

Q What should I do if Firmware Update fails?

- Check your network connection.
- Restart the system and try again.
- Contact technical support for assistance.

Q What happens if the Drive Erase is interrupted?

- Data may not be completely erased. Restart the Drive Erase process to ensure complete data removal.

Q What should I do if the hard drive health is low or if many bad sectors are detected during the Deep Scan?

- Back up your data immediately and replace the hard drive. For further assistance, please contact technical support.

With Biwin Intelligence, users can efficiently manage their hard drives and enhance their device experience. For further assistance, please visit the Biwin website or contact technical support.